


Casio pilot YT-150 (V1/2)

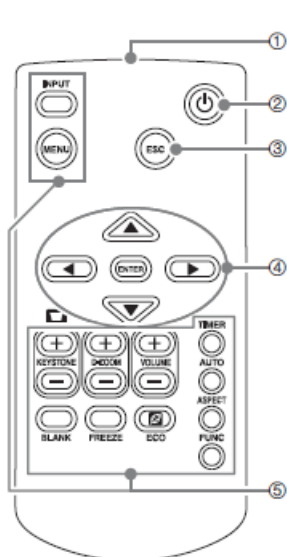

- ① Remote control signal emitter
- ② [POWER] (Power) key
Turns power on or off.
- ③ [ESC] key
Press to exit the currently displayed menu or to cancel an operation.
- ④ Cursor keys (▲/▼/◀/▶), [ENTER] key
Use the cursor keys to move between menu items, and to change setting values. Press the [ENTER] key to select a menu item or to execute a function.
- ⑤ Each of these keys has a specific fixed function. For details, see the sections that describe key operations in "Operating the Projector" (pages 10 through 25). For information about the [MENU] key, for example, see "Using the Setup Menu (MENU)" (page 19).

49,00 zł

39,84 zł netto

 OPIS

 SPECYFIKACJA

Dane techniczne

Producent

Casio